

Spring Vacuum Gauges

BOURDONVAC

A and C, Precision Manometer

Operating Instructions GA09100_002_C0

Part Numbers

160 40

161 20

890 50



Safety Information

Important Safety Information

Warning Indicates procedures that must be strictly observed to prevent hazards to persons.

The Leybold **Bourdon Vacuum Gauges** have been designed for safe and efficient operation when used properly and in accordance with these Operating Instructions. It is the responsibility of the user to carefully read and strictly observe all safety precautions described in this section and throughout the Operating Instructions. The gauges **must only be operated in the proper condition and under the conditions described in the Operating Instructions**. It must be operated and maintained by trained personnel only. Consult local, state, and national agencies regarding specific requirements and regulations. Address any further safety, operation and/or maintenance questions to our nearest office.

Warning



If the system has previously handled hazardous gases, implement the proper precautionary measures before opening the connection. If necessary, use gloves, a respirator and/or protective clothing and work under an exhaust hood.

We reserve the right to alter the design or any data given in these Operating Instructions. The illustrations are not binding.

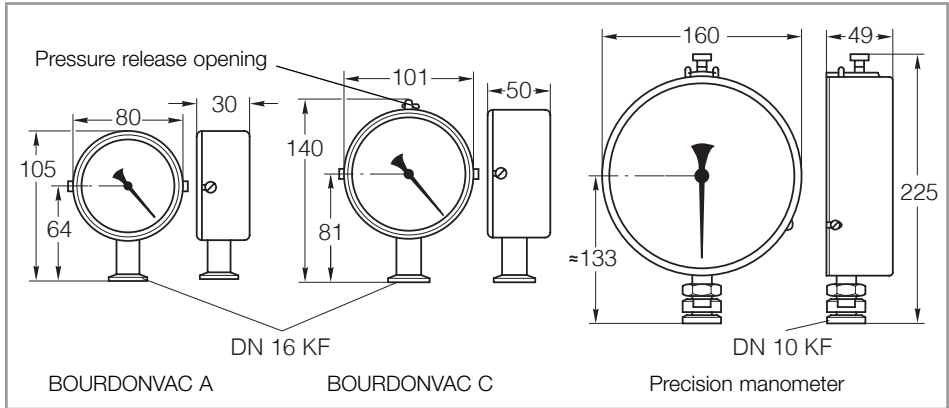


Fig. 1 Dimensions in mm

Description

The interior of a vacuum-tight, bent expansion tube (Bourdon tube) is joined to a vacuum connection, while atmospheric pressure acts on its exterior. Pressure changes cause the curvature of the tubular spring to alter; the movements of the latter are mechanically transferred to a pointer system.

The **Bourdon gauge** is suitable for rough vacuum measurements in the range between 1020 and 5 mbar.

Pressure indication is linear and independent of the nature of the gas, but dependent on the ambient atmospheric pressure.

The **precision manometer** is suitable for pressure measurements in the range 5 - 2000 mbar. Deviations of the ambient atmospheric pressure from 1013 mbar (normal atmosphere) can be compensated for with this instrument by means of an external setting screw. The accuracy of measurement of the precision manometer is $\pm 1\%$ of full-scale deflection.

Supplied Equipment

The gauges are supplied without connecting fittings.

Description

Technical Data

BOURDONVAC	A	C	Precision manometer
Measuring range	5 to 1020 mbar	5 to 1020 mbar	5 to 2000 mbar
Accuracy class	1 (EN 837)	1 (EN 837)	1 (EN 837)
Temperature dependence of accuracy at deviation from the reference temperature 20 °C	max.± 0,4 % per 10 °C of full scale	max.± 0,4 % per 10 °C of full scale	–
Temperature resistance	- 25 to + 60 °C	- 25 to + 60 °C	- 20 to + 60 °C
Max. medium temperature	–	to +100 °C	to +100 °C
Max. pressure	1.5 bar abs.	1.3 bar abs.	2.2 bar abs.
Internal volume	approx.4.4 cm ³	approx.7.5 cm ³	approx.20 cm ³
Scale length	207 mm	188 mm	320 mm
Weight	0.25 kg	0.5 kg	1.1 kg
Leak rate	1·10 ⁻⁸ mbar·l·s ⁻¹	1·10 ⁻⁸ mbar·l·s ⁻¹	1·10 ⁻⁸ mbar·l·s ⁻¹
Connection flange	DN 16 KF	DN 16 KF	DN 10 KF
Materials exposed to contact with the medium:		stainless steel 1.4404	stainless steel copper gasket
Connection flange	Brass MS CW614N-		
Bourdon tube	R430 partially nickel-plated		
Solder	Cu Zn 39 Pb 2 (2.0380)		
	CuBe2		
	S-Sn97Cu3 und		
	S-Sn60Pb38Cu2		

Ordering Information

Part No.	160 40	161 20	890 50
----------	--------	--------	--------

Pressure Release Opening

The BOURDONVAC C has a pressure release opening on the housing top. When using the gauge the handle must always be in the OPEN position, as shown in Fig. 2. The CLOSE position is only for transport and storing. **Do not** pull out the handle.

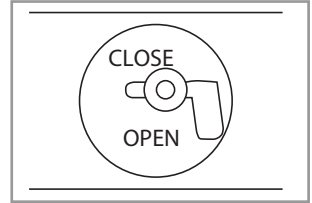


Fig. 2 Pressure release opening at the BOURDONVAC C, top view

Connection

Connection of the gauges to the system is made directly with the small flange.

Precision manometer

For connection to a DN 10 KF small flange the following parts are required:

- Centering ring DN 10 KF with O-ring, Part No.183 21
- Clamping ring DN 10/16 KF, Part No. 183 41

Spring vacuum gauge

For connection to a DN 16 KF small flange the following parts are required:

- Centering ring DN 16 KF with O-ring, Part No. 182 06
- Clamping ring DN 10/16 KF, Part No. 183 41

Service / Disposal

Leybold Service

Contamination

Whenever you send us in equipment, indicate whether the equipment is contaminated or is free of substances which could pose a health hazard. If it is contaminated, specify exactly which substances are involved. You must use the form we have prepared for this purpose.

Form

A copy of the form has been reproduced at the end of these Operating Instructions: "Declaration of Contamination for Compressors, Vacuum Pumps and Components". Another suitable form is available from www.leybold.com → Documentation → Download Documents.

Attach the form to the equipment or enclose it with the equipment.

This statement detailing the type of contamination is required to satisfy legal requirements and for the protection of our employees.

We must return to the sender any equipment which is not accompanied by a contamination statement.

Waste Disposal

Contamination

The equipment may have been contaminated by the process or by environmental influences. In this case the equipment must be decontaminated in accordance with the relevant regulations. We offer this service at fixed prices. Further details are available on request.

Warning



Contaminated parts can be detrimental to health and environment. Before beginning with any work, first find out whether any parts are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.

Separate clean components according to their materials, and dispose of these accordingly. We offer this service. Further details are available on request.

Declaration of Contamination of Compressors, Vacuum Pumps and Components

The repair and / or servicing of compressors, vacuum pumps and components will be carried out only if a correctly completed declaration has been submitted. Non-completion will result in delay. The manufacturer can refuse to accept any equipment without a declaration.

A separate declaration has to be completed for each single component.

This declaration may be completed and signed only by authorized and qualified staff.

Customer/Dep./Institute : _____ Address : _____ _____ Person to contact: _____ Phone : _____ Fax: _____ End user: _____	Reason for return: <input checked="" type="checkbox"/> applicable please mark Repair: <input type="checkbox"/> chargeable <input type="checkbox"/> warranty Exchange: <input type="checkbox"/> chargeable <input type="checkbox"/> warranty <input type="checkbox"/> Exchange already arranged / received Return only: <input type="checkbox"/> rent <input type="checkbox"/> loan <input type="checkbox"/> for credit Calibration: <input type="checkbox"/> DKD <input type="checkbox"/> Factory-calibr. <input type="checkbox"/> Quality test certificate DIN 55350-18-4.2.1
--	--

A. Description of the Leybold product: Material description : _____ Catalog number: _____ Serial number: _____ Type of oil (ForeVacuum-Pumps) : _____	Failure description: _____ Additional parts: _____ Application-Tool: _____ Application- Process: _____
--	---

B. Condition of the equipment	No ¹⁾	Yes	No	Contamination :	No ¹⁾	Yes
1. Has the equipment been used	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	toxic	<input type="checkbox"/>	<input type="checkbox"/>
2. Drained (Product/service fluid)	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	corrosive	<input type="checkbox"/>	<input type="checkbox"/>
3. All openings sealed airtight	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	flammable	<input type="checkbox"/>	<input type="checkbox"/>
4. Purged	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	explosive ²⁾	<input type="checkbox"/>	<input type="checkbox"/>
If yes, which cleaning agent				radioactive ²⁾	<input type="checkbox"/>	<input type="checkbox"/>
and which method of cleaning				microbiological ²⁾	<input type="checkbox"/>	<input type="checkbox"/>
¹⁾ If answered with "No", go to D. ←				other harmful substances	<input type="checkbox"/>	<input type="checkbox"/>

C. Description of processed substances (Please fill in absolutely) 1. What substances have come into contact with the equipment ? Trade name and / or chemical term of service fluids and substances processed, properties of the substances According to safety data sheet (e.g. toxic, inflammable, corrosive, radioactive)																												
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 5%;">X</td> <td style="width: 40%;">Tradename:</td> <td style="width: 55%;">Chemical name:</td> </tr> <tr><td>a)</td><td></td><td></td></tr> <tr><td>b)</td><td></td><td></td></tr> <tr><td>c)</td><td></td><td></td></tr> <tr><td>d)</td><td></td><td></td></tr> </table>	X	Tradename:	Chemical name:	a)			b)			c)			d)			<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%;"></td> <td style="width: 10%; text-align: center;">No</td> <td style="width: 10%; text-align: center;">Yes</td> </tr> <tr> <td>2. Are these substances harmful ?</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> </tr> <tr> <td>3. Dangerous decomposition products when heated ?</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> </tr> <tr> <td colspan="3">If yes, which ? _____</td> </tr> </table>		No	Yes	2. Are these substances harmful ?	<input type="checkbox"/>	<input type="checkbox"/>	3. Dangerous decomposition products when heated ?	<input type="checkbox"/>	<input type="checkbox"/>	If yes, which ? _____		
X	Tradename:	Chemical name:																										
a)																												
b)																												
c)																												
d)																												
	No	Yes																										
2. Are these substances harmful ?	<input type="checkbox"/>	<input type="checkbox"/>																										
3. Dangerous decomposition products when heated ?	<input type="checkbox"/>	<input type="checkbox"/>																										
If yes, which ? _____																												

²⁾ Components contaminated by microbiological, explosive or radioactive products/substances will not be accepted without written evidence of decontamination.

D. Legally binding declaration

I / we hereby declare that the information supplied on this form is accurate and sufficient to judge any contamination level.

Name of authorized person (block letters) : _____

Date

signature of authorized person

firm stamp

Sales and Service

Germany

Leibold GmbH

Sales, Service, Support Center (SCS)
Bonner Strasse 498
D-50968 Cologne
T: +49-(0)221-347 1234
F: +49-(0)221-347 31234
sales@leibold.com
www.leibold.com

Leibold GmbH

Sales Area North

Branch Office Berlin
Industriestrasse 10b
D-12099 Berlin
T: +49-(0)30-435 609 0
F: +49-(0)30-435 609 10
sales.bn@leibold.com

Leibold GmbH

Sales Office South

Branch Office Munich
Karl-Hammerschmidt-Strasse 34
D-85609 Aschheim-Dornach
T: +49-(0)89-357 33 9-10
F: +49-(0)89-357 33 9-33
sales.mn@leibold.com
service.mn@leibold.com

Leibold Dresden GmbH

Service Competence Center

Zur Wetterwarte 50, Haus 304
D-01109 Dresden
Service:
T: +49-(0)351-88 55 00
F: +49-(0)351-88 55 041
info.dr@leibold.com

Europe

Belgium

Leibold Nederland B.V.

Belgisch bijkantoor
Leuvensesteenweg 542-9A
B-1930 Zaventem

Sales:
T: +32-2-711 00 83
F: +32-2-720 83 38
sales.zv@leibold.com
Service:
T: +32-2-711 00 82
F: +32-2-720 83 38
service.zv@leibold.com

France

Leibold France S.A.S.

Parc du Technopolis, Bâtiment Beta
3, Avenue du Canada
F-91940 Les Ulis cedex
Sales and Service:
T: +33-1-69 82 48 00
F: +33-1-69 07 57 38
info.ctb@leibold.com
sales.ctb@leibold.com

Leibold France S.A.S.

Valence Factory
640, Rue A. Bergès
B.P. 107
F-26501 Bourg-lès-Valence Cedex
T: +33-4-75 82 33 00
F: +33-4-75 82 92 69
marketing.vc@leibold.com

Great Britain

Leibold UK LTD.

Unit 9
Silverglade Business Park
Leatherhead Road
Chessington
Surrey (London)
KT19 2QL
Sales:
T: +44-13-7273 7300
F: +44-13-7273 7301
sales.ln@leibold.com
Service:
T: +44-13-7273 7320
F: +44-13-7273 7303
service.ln@leibold.com

Italy

Leibold Italia S.r.l.

Via Trasimeno 8
I-20128 Mailand
Sales:
T: +39-02-27 22 31
F: +39-02-27 20 96 41
sales.mi@leibold.com
Service:
T: +39-02-27 22 31
F: +39-02-27 22 32 17
service.mi@leibold.com

Netherlands

Leibold Nederland B.V.

Floridareef 102
NL-3565 AM Utrecht
Sales and Service:
T: +31-(30) 242 63 30
F: +31-(30) 242 63 31
sales.ut@leibold.com
service.ut@leibold.com

Switzerland

Leibold Schweiz AG, Pfäffikon

Churerstrasse 120
CH-8608 Pfäffikon
Warehouse and shipping address:
Riedthofstrasse 214
CH-8105 Regensdorf
Sales:
T: +41-44-308 40 50
F: +41-44-302 43 73
sales.zh@leibold.com
Service:
T: +41-44-308 40 62
F: +41-44-308 40 60
service.zh@leibold.com

Spain

Leibold Spain, S.A.

C/. Huelva, 7
E-08940 Cornellà de Llobregat
(Barcelona)
Sales:
T: +34-93-666 43 11
F: +34-93-666 43 70
sales.ba@leibold.com
Service:
T: +34-93-666 46 11
F: +34-93-685 43 70
service.ba@leibold.com

America

USA

Leibold USA Inc.

5700 Mellon Road
USA-Export, PA 15632
T: +1-724-327-5700
F: +1-724-325-3577
info.ex@leibold.com
Sales:
T: +1-724-327-5700
F: +1-724-333-1217
Service:
T: +1-724-327-5700
F: +1-724-325-3577

Brazil

Leibold do Brasil

Rod. Vice-Prefeito Hermenegildo Tonolli,
nº. 4413 - 6B
Distrito Industrial
Jundiaí - SP
CEP 13.213-086
Sales and Service:
T: +55 11 3395 3180
F: +55 11 99467 5934
sales.ju@leibold.com
service.ju@leibold.com

Asia

P. R. China

Leibold (Tianjin)

International Trade Co. Ltd.

Beichen Economic
Development Area (BEDA),
No. 8 Western Shuangchen Road
Tianjin 300400
China
Sales and Service:
T: +86-22-2697 0808
F: +86-22-2697 4061
F: +86-22-2697 2017
sales.tj@leibold.com
service.tj@leibold.com

India

Leibold India Pvt Ltd.

No. 82(P), 4th Phase
K.I.A.D.B. Plot
Bommasandra Industrial Area
Bangalore - 560 099
Indien
Sales and Service:
T: +91-80-2783 9925
F: +91-80-2783 9926
sales.bg@leibold.com
service.bg@leibold.com

Japan

Leibold Japan Co., Ltd.

Headquarters
Shin-Yokohama A.K.Bldg., 4th floor
3-23-3, Shin-Yokohama
Kohoku-ku, Yokohama-shi
Kanagawa 222-0033
Japan
Sales:
T: +81-45-471-3330
F: +81-45-471-3323
sales.yh@leibold.com

Leibold Japan Co., Ltd.

Tsukuba Technical Service Center
1959, Kami-yokoba
Tsukuba-shi, Ibaraki-shi 305-0854
Japan
Service:
T: +81-29 839 5480
F: +81-29 839 5485
service.ik@leibold.com

Malaysia

Leibold Malaysia

Leibold Singapore Pte Ltd.

No. 1 Jalan Hi-Tech 2/6
Kulim Hi-Tech Park
Kulim, Kedah Darul
Aman 09000
Malaysia
Sales and Service:
T: +604 4020 222
F: +604 4020 221
sales.ku@leibold.com
service.ku@leibold.com

South Korea

Leibold Korea Ltd.

3F, Jajilzone 2 Tower
Jeongja-dong 159-4
Bundang-gu Sungnam-si
Gyeonggi-do
Bundang 463-384, Korea
Sales:
T: +82-31 785 1367
F: +82-31 785 1359
sales.bd@leibold.com
Service:
623-7, Upsung-Dong
Cheonan-Si
Chungcheongnam-Do
Korea 330-290
T: +82-41 589 3035
F: +82-41 588 0166
service.cn@leibold.com

Singapore

Leibold Singapore Pte Ltd.

8 Commonwealth Lane #01-01
Singapore 149555
Singapore
Sales and Service:
T: +65-6303 7030
F: +65-6773 0039
sales.sg@leibold.com
service.sg@leibold.com

Taiwan

Leibold Taiwan Ltd.

No 416-1, Sec. 3
Chungshin Rd., Chutung
Hsinchu County 310
Taiwan, R.O.C.
Sales and Service:
T: +886-3-500 1688
F: +886-3-583 3999
sales.hc@leibold.com
service.hc@leibold.com

Headquarter

Leibold GmbH

Bonner Strasse 498
D-50968 Cologne
T: +49-(0)221-347-0
F: +49-(0)221-347-1250
info@leibold.com



www.leibold.com